# VP GLOBE Ø28

 
Designed by VERNER PANTON



It is not the individual lamp, the individual carpet or the individual shelf that completes a room. But the combination of colour complexity and light as a whole.

### **BEFORE YOU GET STARTED**

**RECOMMENDATION:** We recommend that you leave the carton board pads in during assembly and mounting. To prevent fingerprints and scratches, please use the enclosed gloves.





1-2 people job



Set aside plenty of time

MAINTENANCE: IMPORTANT! Clean with a soft cloth, warm water and a mild detergent. Do NOT use any abrasive materials.

**CLEANING KIT**: You can purchase a cleaning kit developed especially for the VP Globe and Panto pendants. Contact the store where you purchased your product for further details.





Globe Lamp x 1



Canopy x 1



Gloves x 1 pair



Suspension Tube x 1



Plastic Loop x 1



Strain Relief x 1



Terminal Block x 1

#### NOT INCLUDED:



Flathead Electric Screwdriver




Philips Screwdriver



G9: max. 10W

#### RECOMMENDATION:

To achieve a bright, warm and clean light, we recommend a light source with the following: 800+ lumens 2700 Kelvin CRI90+

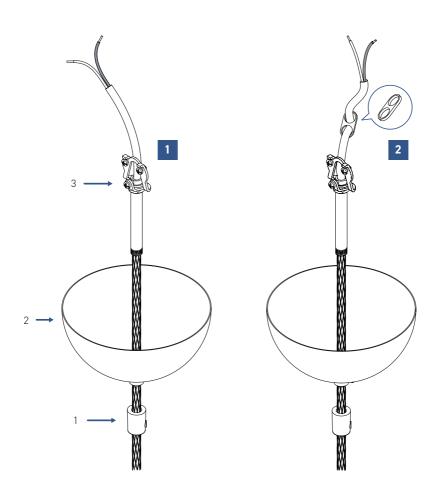


Apply the strain relief, canopy and hanger to the cord, in correct order.

2

Secure the plastic loop to the cord.

#### ASSEMBLY INSTRUCTION

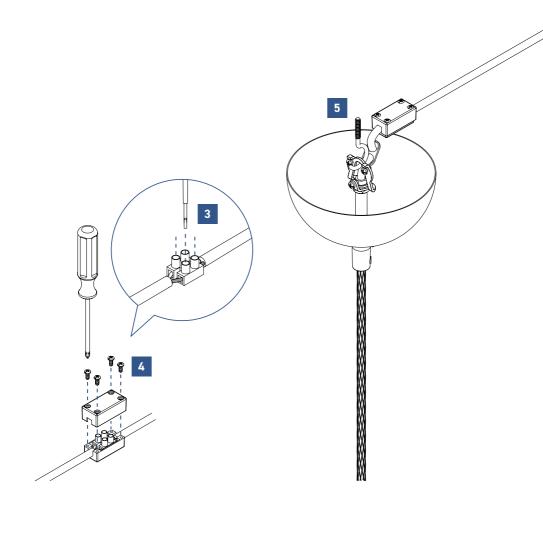

3


Place the outlet cord in the terminal block and assemble it with screws.

4

Connect the cord to an outle or extend it by using the terminal block.

5


Hang the lamp in the hook.

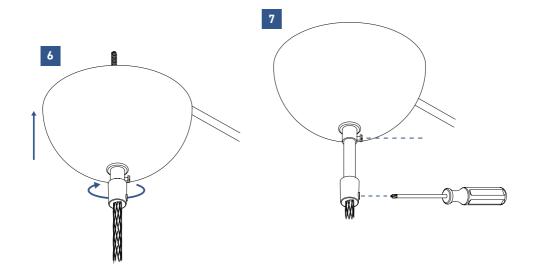

Lift the canopy so the thread at the bottom of the suspension tube is visible. Tighten the strain relief to the suspension tube. 7


Lift the canopy to the ceiling and tighten the screw on the canopy.

Tighten the set screw on the strain relief

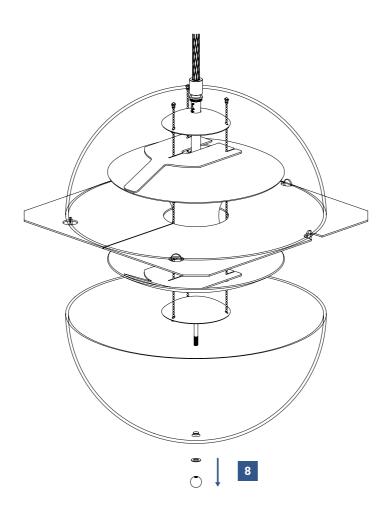


Seperate the bottom shell from the top, by unscrewing the metal ball and slightly lift it off.


Place the bottom shell on a soft cloth to avoid damaging it.

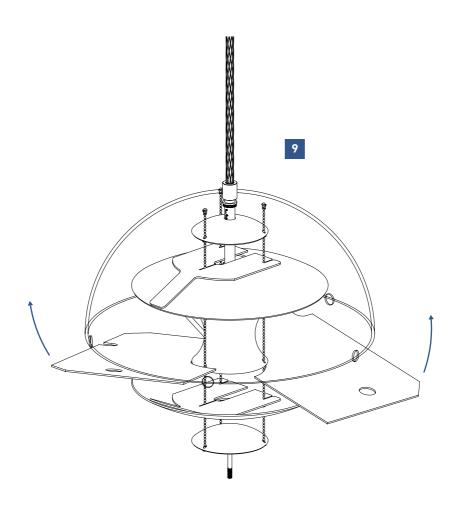


Release the cardboard sheet by twisting it and then pulling it out.

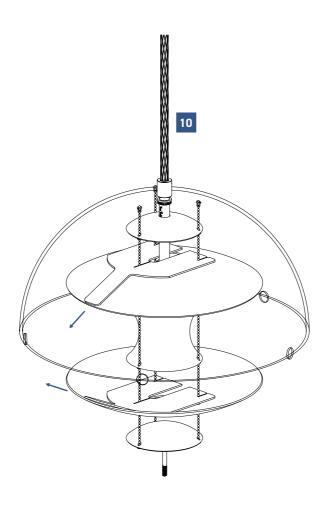

Carefully remove the two cardboard discs from the lamp.

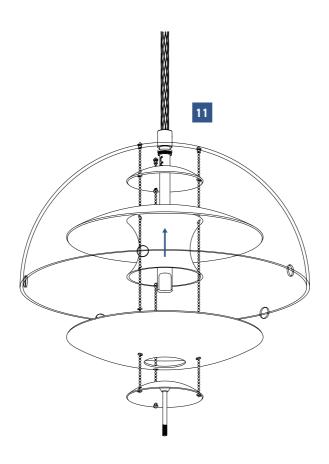

Gently lift the apple core to place the light source in the socket.

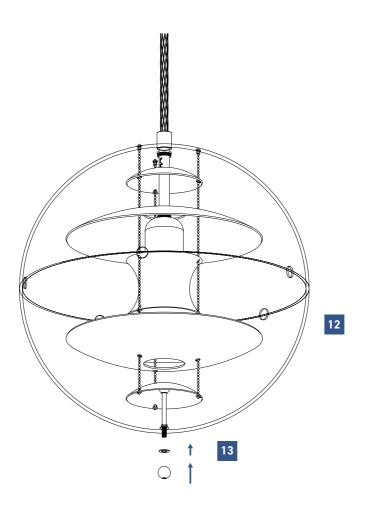

Carefully lift the bottom acrylic shell into place.

13

Apply the washer and fasten the metal ball.

**IMPORTANT!** Do not tighten the metal ball too firmly, or you may damage the acrylic shell. The shape of the acrylic shells can deviate slightly from a perfect circle. This is normal, and the shells have been paired to match. When assembling, simply rotate the bottom acrylic shell to find the best position.

## **UERPAN**

VERPAN - EGESKOVVEJ 29 - DK-8700 HORSENS WWW.VERPAN.COM

info@verpan.com

